HIOS®







Anyone can be a skilled craftsmar



- From analogue to digital -

Brushless® Screwdriver

Screw Counter / Pulse Counter*

熟練工BLG-ZERO1

JUKUREN "BLG-ZERO1" the digitally controlled screwdriver detects screw fastening errors.

Even a beginner can easily operate it with a simple 3-step settings.

■Direct Teaching


Setting can be easily done by pressing a button. Time and effort for setting will be significantly saved by directly fastening several screws into the work pieces and allowing the driver to automatically learn the number of rotating pulses of the motor (the setting value is $\pm 10\%$ of the maximum count and $\pm 10\%$ of the minimum count) from the start to the completion of screw fastening.

■Pulse System


By counting the number of rotating pulses of the motor, the system precisely judges screw fastening errors such as the mixing of a wrong type of screw, a floating screw, a Cam out recess, a stripped screw hole and a cross threaded screw.

Screw Counter

It displays the remaining number of screws to fasten every time a screw is fastened.

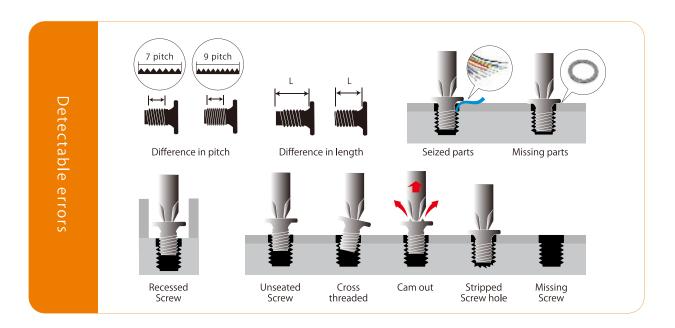

Simple 3-step Setting

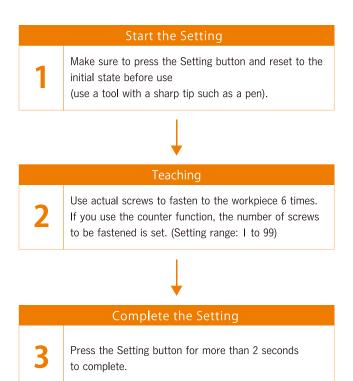

Counter Display Section



Setting Button

To enter the teaching mode and set the number of screws to fasten.

Display Section

Screw fastening count or an error code is displayed.

Pass Light

When the screw fastening result is "OK", the green LED light turns ON.

Fail Light


When the screw fastening result is "NG," the red LED light turns ON.



Мо	Model		BLG-4000ZERO1	BLG-5000ZERO1	BLG-5000ZERO1-15	BLG-5000ZERO1-18	BLG-5000ZERO1-HT
Ou	tput Torque	N∙m	0.1 - 0.55	0.2-1.2	0.3-1.0	0.5-1.5	0.5-2.0
Rar	ange	(kgf•cm)	(1-5.5)	(2-12)	(3-10)	(5-15)	(5-20)
Torque Switching			Stepless adjustment				
Unlo	oaded Rotation ed (rpm) ±10%	HI	1,000	1,000	1,500	1,800	730
Spe		LOW	690	690	1000	1.200	
C ===	rew Size (mm)	Machine Screw	1.4-2.6	2.0-3.0	2.3-3.0	2.3-3.0	2.0-4.0
SCIE		Tapping Screw	1.4-2.3	2.0-3.0	2.0-2.6	2.0-2.6	2.0-3.0
Dri	ve size	HIOS Shank	H4	H4	H4	H5&5HEX	H5&5HEX
DIII	ve size	Hexagonal Shank	1/4HEX	H5&5HEX & or 1/4HEX	H5&5HEX & or 1/4HEX	1/4HEX	1/4HEX
Pov	war Cuppy	T-45BL	0	0	O*	_	○*
Power Suppy		T-70BL	0	0	0	0	○*
	Bit type	H4	+#0(Φ2.5×40mm) +#1(Φ4.0×40mm)	+#1(Φ4.0×40mm) +#2(Φ4.0×40mm)	+#1(Φ4.0×40mm) +#2(Φ4.0×40mm)		
Accessories	ыстурс	H5				+#1(Φ5.0×60mm) +#2(Φ5.0×60mm)	+#1(Φ5.0×60mm) +#2(Φ5.0×60mm)
orie	Spring		White				
Ś	Cord length	(m)	2m(6P)	2m(6P)	2m(6P)	2m(6P)	2m(6P)
	HEX L-wrence	:h		WAF: 5mm (1pc)	WAF: 5mm (1pc)	WAF: 5mm (1pc)	WAF: 5mm (1pc)

^{*(}Note) Use only 2 (HI) power outlet with the * models. These models may not perform properly on 1 (LOW) power outlet.


Output torque guide (HI input)

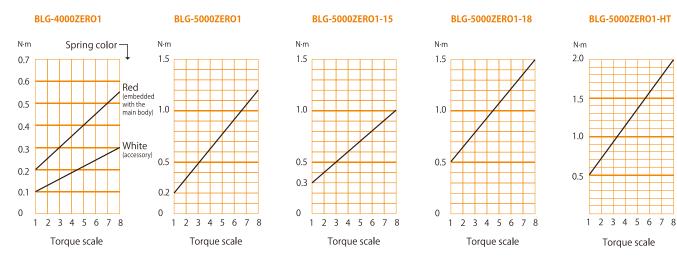

^{*}For the Torque Adjustment spring for BLG-4000ZERO1, two types are available. One is for high torque (embedded in the main body) and the other one is for low torque. Please select a suitable one for your application.

[●]If you order a driver with HIOS Shank H5, φ 5.0X60mm sized bits for \oplus #1 & 2 will be attached. ●If you order a driver with Hexagonal Shank, no bits will be attached.

Power supply for Brushless screwdrivers

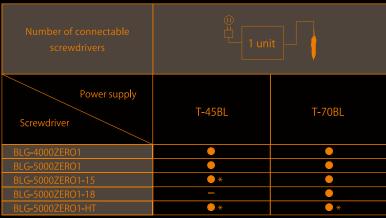

^{*(}Note) Use only 2 (HI) power outlet with the * models. These models may not perform properly on 1 (LOW) power outlet.



*Only one type of AC cord and p	dud are attached as accessories



^{*}Only one type of AC cord and plug are attached as accessories



HIOS Inc.

Head Office: I-16-5 Akiyama, Matsudo City, Chiba Pref., Japan 270-2223 Phone: +81 (Japan) 47-392-2001
Osaka Office: I8F Naniwasuji SIA Bldg., 2-4-2 Shinmachi, Nishi-ku, Osaka City, Japan 550-0013 Phone: +81 (Japan) 6-6533-0903
Nagoya Office: 9F Kirix Marunouchi Bldg., I-17-19 Marunouchi, Naka-ku, Nagoya, Aichi Pref., Japan 460-0002 Phone: +81 (Japan) 52-219-5566
Yamagata Factory: 5 Takagi, Yamagata City, Yamagata Pref., Japan 990-2346 Phone: +81 (Japan) 23-645-8100
HIOS (Shenzhen) Co., LTD. ITCD Room New Times Plaza, I Taizi Road, Shekou Nanshan District, Shenzhen, Guangdong Province, China 518067





